

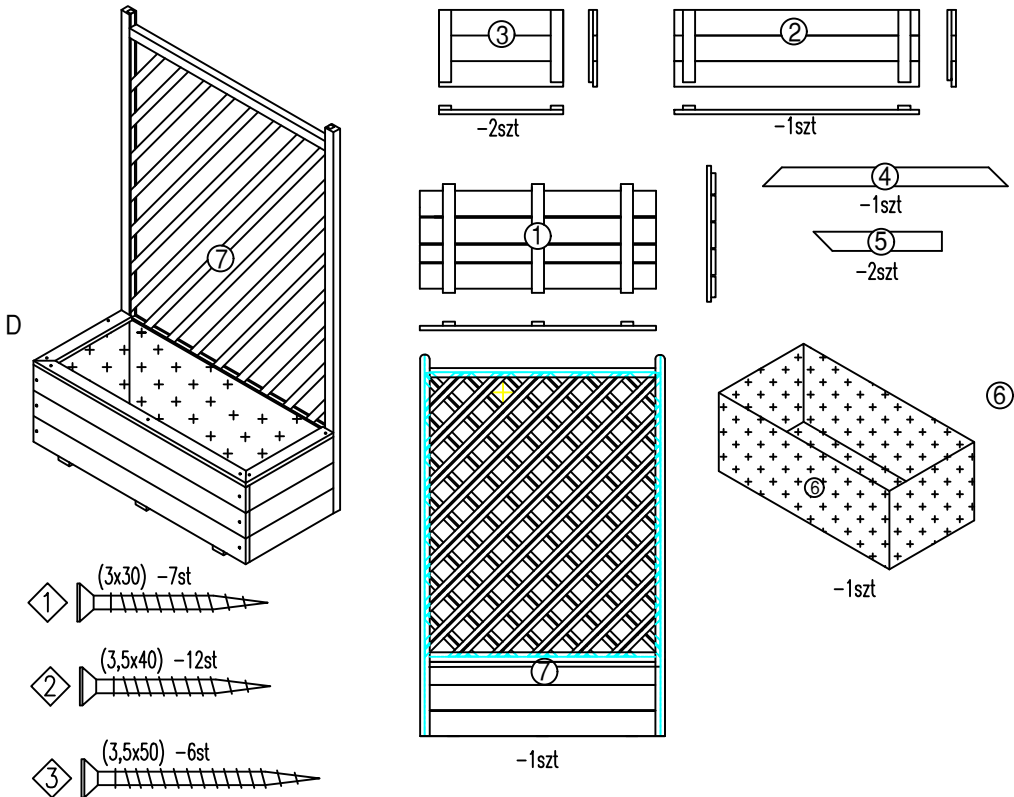
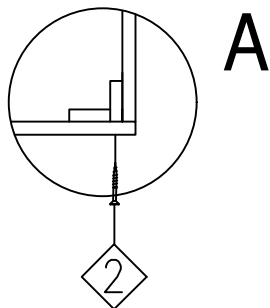


1003339 - plantenbak trellis 140x90x40cm

1/2

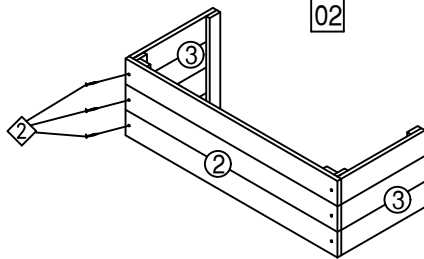


- 1 (3x30) - 7st
- 2 (3,5x40) - 12st
- 3 (3,5x50) - 6st

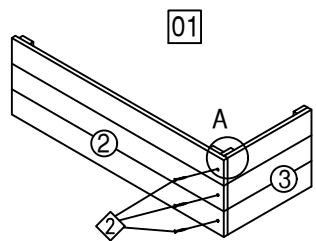




- (S) Vi rekommenderar förbörning av skruvhålen!
- (NL) Voor alle schroeven adviseren wij de gaten voor te boren!
- (D) Vor dem Schraubeneindrehen soll man die Löcher boren!
- (UK) For all screws we advise to pre-bore the holes!
- (F) Pour toutes les vis nous vous recommandons de percer des trous!

1003339 - plantenbak trellis 140x90x40cm

1/2

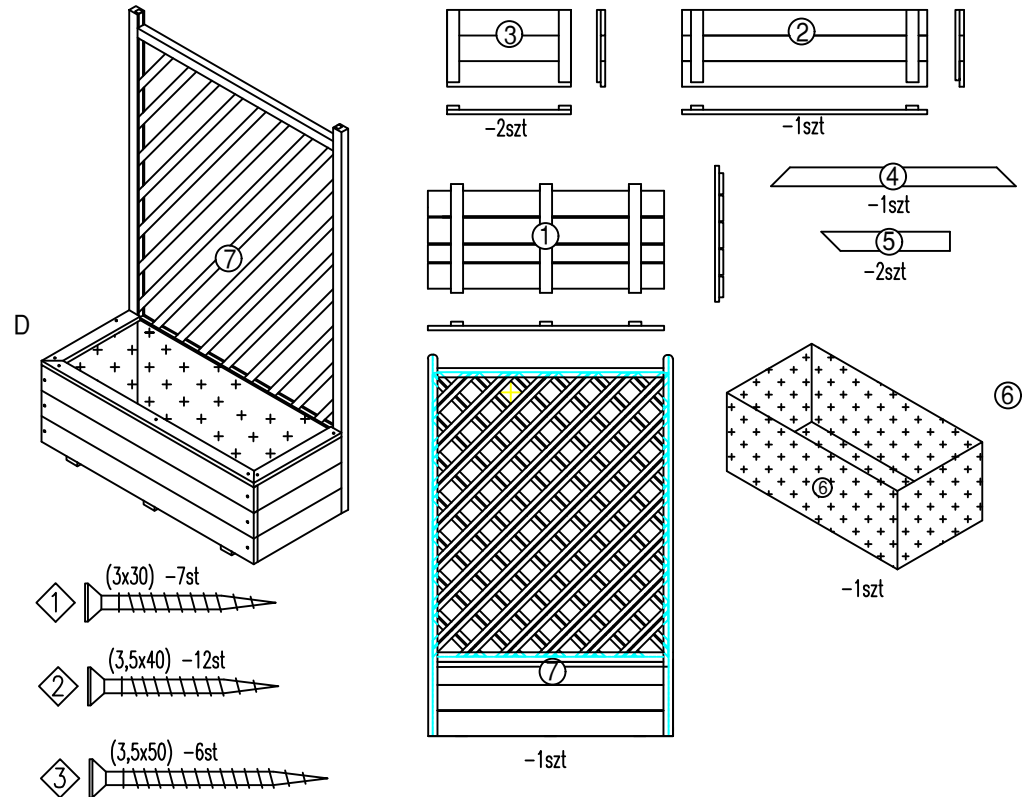

- 1 (3x30) - 7st
- 2 (3,5x40) - 12st
- 3 (3,5x50) - 6st

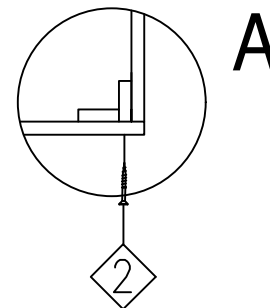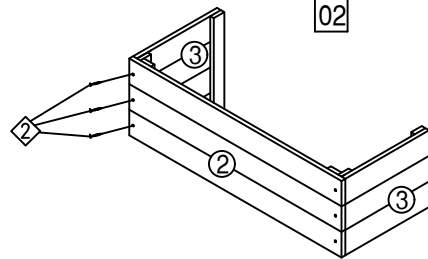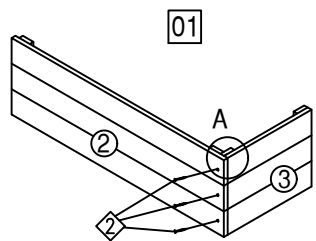

- (S) Vi rekommenderar förbörning av skruvhålen!
- (NL) Voor alle schroeven adviseren wij de gaten voor te boren!
- (D) Vor dem Schraubeneindrehen soll man die Löcher boren!
- (UK) For all screws we advise to pre-bore the holes!
- (F) Pour toutes les vis nous vous recommandons de percer des trous!

